


SECTION AA - 1 OF 2

NO SCALE

Step 1. Excavate trap and outlet area
 Step 2. Fill and compact embankment.
 Step 3. Line outlet area with 1st layer of filter cloth

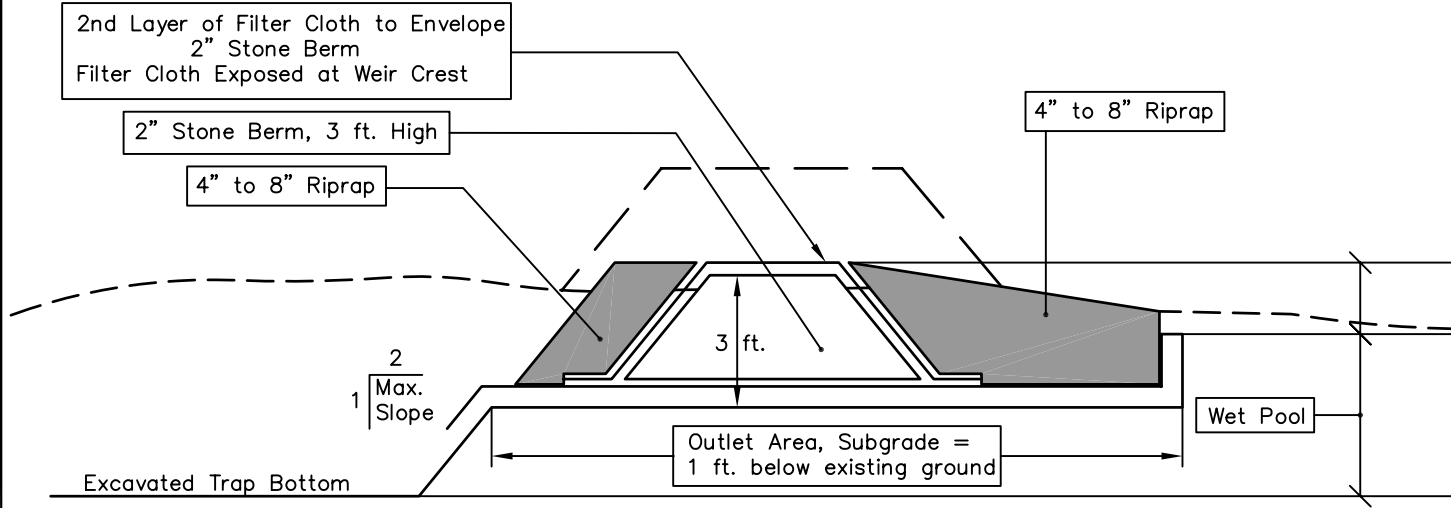

SECTION AA - 2 OF 2

NO SCALE

Step 4. Construct berm of 2" stone, 3 ft. high.
 Step 5. Place 2nd layer of filter cloth over the 2" stone berm.
 Step 6. Place 4" to 8" riprap on both sides of the 2" stone and in outlet discharge area.



MONTGOMERY COUNTY
 DEPARTMENT OF PERMITTING
 SERVICES
 WATER RESOURCES

MODIFIED
 DEWATERING OUTLET
 FOR RIP-RAP OUTLET
 SEDIMENT TRAP

DATE: 7/03

SCALE: NONE